

The sling type code is: name of component or assembly at top of sling and name of component at bottom of sling (e.g "MF-MF" is a single leg sling with a master link on each end, "TL3-ECKN" is a triple leg sling with a master link at the top and a sling hook at the bottom)



EGKN-EGKN



MG-EGKN



MG-P



MG-BKG



Reference the full library of Gunnebo & Grabiq Product Literature [here](#)



MG-CL



MG-CG



MG-MG



MF-MF



TGI-EGKN



TGI-BKG



TGI-CL



TGI-CG



TGI-P



TLI-EGKN



TLI-BKG

 
 
 
 




TLI-CL



TLI-CG



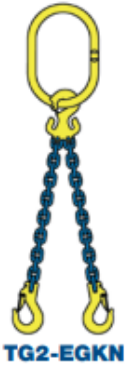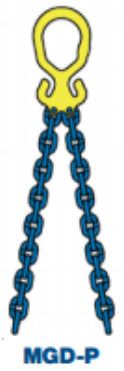

Reference the full library of Gunnebo & Grabiq Product Literature [here](#)



the
carpenter
group

Grabiq™



Reference the full library of Gunnebo & Grabiq Product Literature [here](#)



TG3-EGKN



TG3-BKG



TG3-CL



TG3-CG



TG3-P



TL3-EGKN



TL3-BKG



TL3-CL



TL3-CG




the
carpenter
group

Grabiq™




Reference the full library of Gunnebo & GrabiQ Product Literature [here](#)

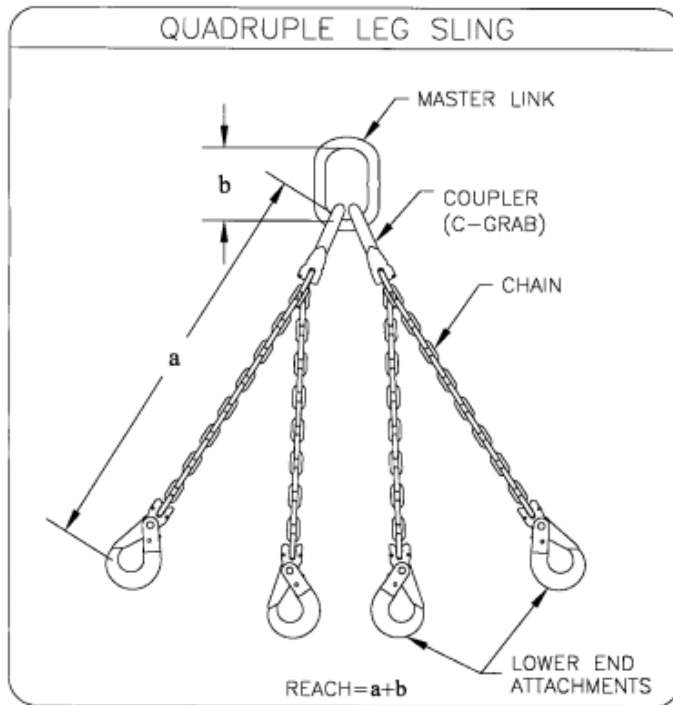

- It is a common practice, when possible, to keep all hooks in the same plane as the master link. This is easily accomplished on 1, 2, & 4 leg slings. It is not possible with 3-leg GrabiQ slings when single and dual fittings are mixed.
- It is a common practice, when possible, to attach hooks so that latches point away from the master link.
- Mixing GrabiQ fittings: Adding two additional chain links to the CL & CLD gives the same effective reach as CG & CGD. The MG & MGD have the same effective reach.

- A metal ID tag must always be attached to a chain sling, showing serial number, size, reach, Working Load Limit at angle of lift and manufacturer.
- The reach of the sling is the length measured from the load-bearing surface of the master link to the load-bearing surface of the hook or lower terminal (as shown in illustration).
- Normally, the master link will have a maximum of two connecting links, CG, CGD, CL, or CLD. The maximum number of connecting links that can ever be mounted on a single master link is three, when constructing a double leg basket.
- A GrabiQ sling can never have more than four independent legs or two basket legs.
- Attaching CG, CGD, CL, & CLD connectors to MF, MFX, & MTX Master Links: Insert the connector onto the master link at the engineered flat. C-Connecting links are normally attached to the master link using the Dismountable Connecting Set type CS or the Permanent Connecting Set type CP. Each C-Connector includes one solid retainer pin, 1 larger rolled spring keeper pin and 1 smaller rolled spring keeper pin. When the dismountable connecting set is used the sling can be disassembled for repair. The permanent connecting set cannot be disassembled for repair.
 - CS – 1st install the solid retainer pin. 2nd Drive the smaller rolled spring keeper pin through the hole provided at a right angle to the solid retainer pin. The fit should be very snug.
 - CP – 1st install the solid retainer pin. 2nd Drive the larger rolled spring keeper pin into the same hole, directly behind solid retainer pin. The fit should be very snug.

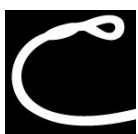

the
carpenter
group

